

14 Pin Reference Guide

14 Pin Plug Ports	A	B	C	D	E	F	G	H	J	K	L	M	N
Bobcat 14 pin	LH L/R	Ground	LH Center L	LH-Center R	LH Right - UP	LH Right DN	RH - L side - UP	RH - L Side - DN	Open	(+12v)	Aux HY Enable Jumper K-L	Open	Open
Case 14 pin	-	Ground	Button 2 LH Handle Down	Button 2 LH Handle UP	Button 1 RH Right - UP	Button 1 RH Right - DN	Button 3 LH Handle UP	Button 3 LH Handle - DN	Signal Power	Keyed (+12v)	EHF Interlock	-	-
CAT 14 pin	LH Trigger AUX7	Ground	C- Control Aux 5	C+ Control - Aux 6	C2 Control - Aux 4	C1 Control - Aux 3	-	-	Switch ON for constant 12v	XPS Jump B - K	-	-	XHP or XE Jump B - N
JCB/Volvo 14 pin	-	Ground	C-SW FWD	C-SW BWD	D - SW FWD	D-SW BWD	F-SW FWD	F-SW BWD	-	(+12v)	-	-	-
John Deere	Ground	-	Right Down	Left Down	Left UP	Dash Right	Right UP	Dash Left	-	-	-	-	-
Kubota 14 pin	-	Ground	LH Switch	RH Switch	-	-	-	-	-	(+12v)	-	-	-
Kubota extended	-	Ground	Button #1	Button #2	Button #3	Button #4	Button #5	Button #6	Button #7	(+12v)	-	-	-
New New Holland	-	Ground	LH #3-DN	LH #3 - UP	RH#1 - UP	RH #1 - DN	Handle #2 - UP	Handle # 2 DN	On/Off ATT Signal Power	(+12v)	-	-	-
Old New Holland	-	Ground	SW3 MOM Down	SW MOM UP	SW1 MOM UP	SW1 MOM DN	SW2 MOM DN	SW2 MOM UP	On/Off ATT Signal Power	(+12v)	-	-	-
Takeuchi	-	Ground	SW1 UP R Joy/L UP	SW 1 DN- R Joy/L Down	SW2 UP- Rjoy/R UP	SW2 DN - Rjoy/R DN	Console	Console	R Joy Trigger	(+12v)	-	-	-
Yanmar	-	Ground	SW1 UP	SW 1 DN	SW 2 UP	SW 2 DN	SW3 UP	SW3 DN	-	(+12v)	-	-	-
Mustang	-	Ground	SW1 UP	SW 1 DN	SW 2 UP	SW 2 DN	SW3 UP	SW3 DN	-	(+12v)	-	-	-
Gehl	SW 4	Ground	SW1 UP	SW 1 DN	SW 2 UP	SW2 DN	SW3 UP	SW3 DN	-	(+12v)	-	-	-
Terex/ASV	(+) Ground	LH-SW DN	LH- Right	LH - Left	(-) Ground	Seat SW	LH - UP	(+12v)	-	-	-	-	-
Wacker 14 pin	-	Ground	LH Center L	LH Center R	LH Right - UP	LH Right - DN	-	-	-	(+12v)	-	-	-